



SL27T WIRING FOR 2 x 17WT8 FLUORESCENT LAMPS

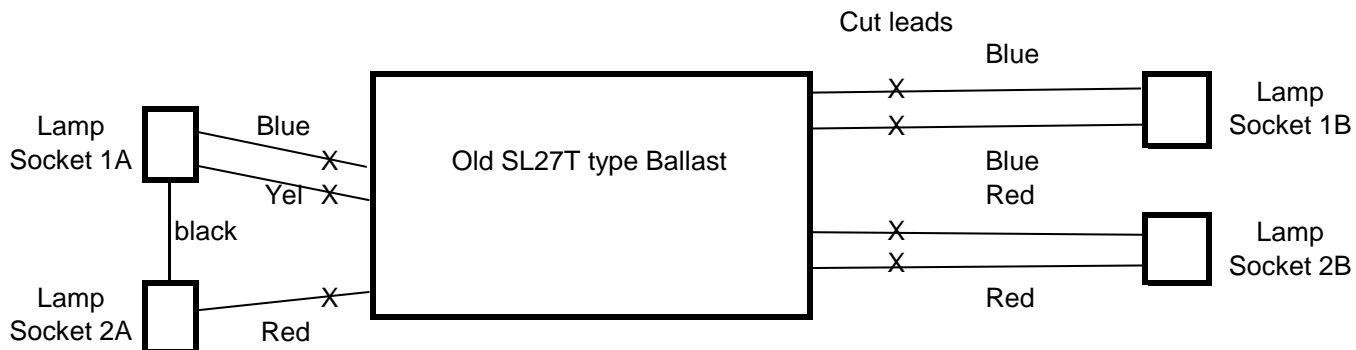

Note Turn off the power before you re-wiring a new ballast!

- 1 Cut old SL27 lead wires.
- 2 Remove SL27 ballast from old fixture

- 3 Install new SL27 (with 8 wires)
- 4 Re-wiring it per below diagram by wire nuts

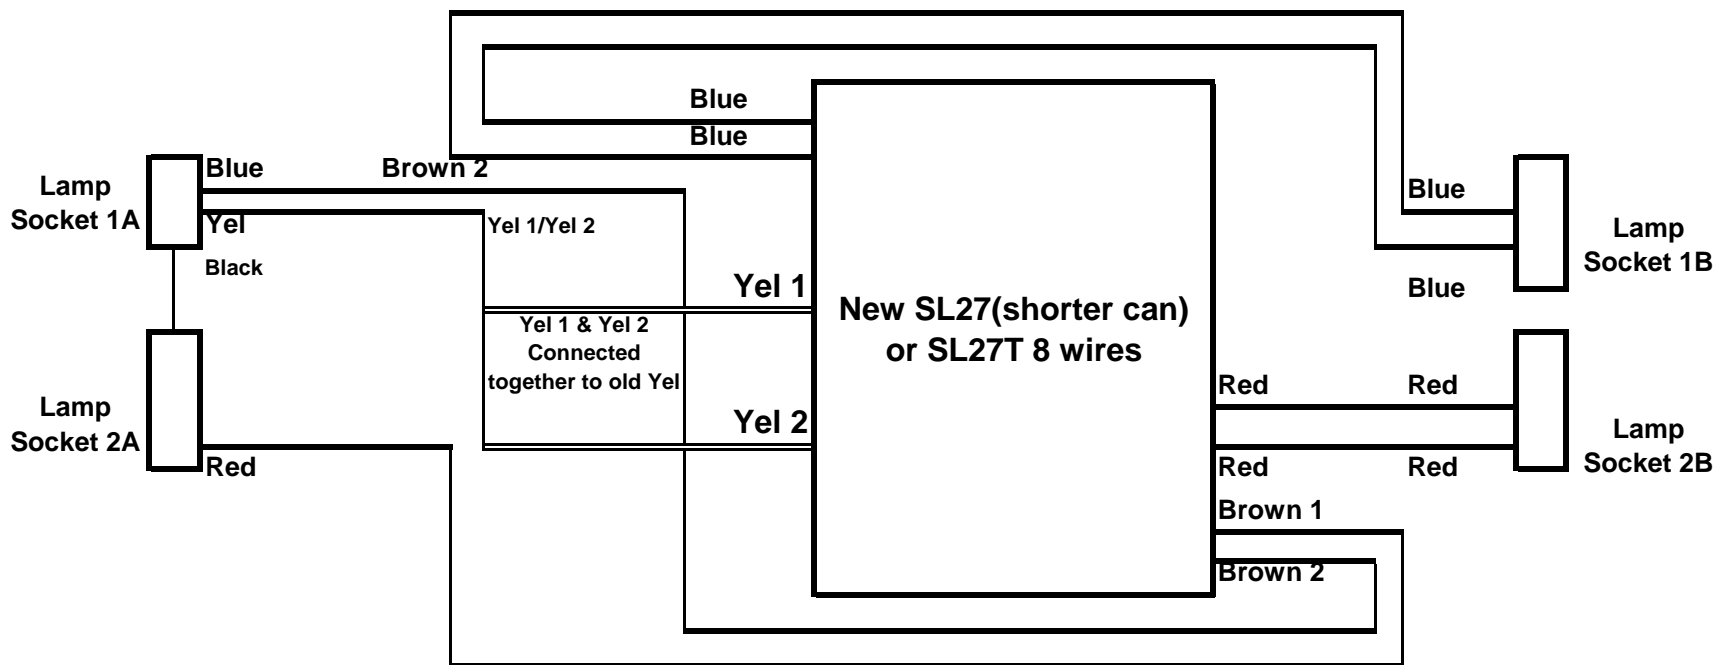

Caution:

1. Do not pull original wire leads from lampholders. This may cause loose contact in the lampholders.
2. Use wire nuts to install the new ballast in the fixture. Make sure the connection is tight.

